


EZ Access® Crawl Space Door

Installation Instructions

When Installing the Door in New Skirting – Use the Following:

1. Using key, unlock door & remove door from frame.
2. Install 5/8" J-molding around 3 sides of frame (top & 2 sides) using small self-tapping tek screws (not supplied).

NOTE: J-molding on sides should not extend below raised flat portion of frame - See Figure A.

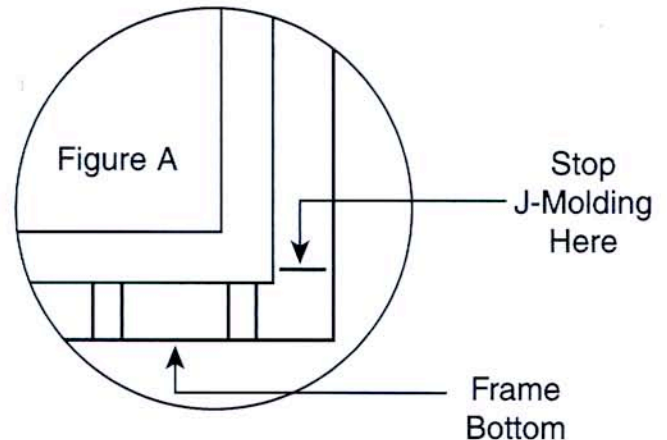

3. With J-molding installed, frame will now be the width of 2 skirting panels. (Based on 16" panels).
4. Insert bottom of frame into ground track & install skirting into J-molding. Continue skirting installation.
5. Replace door into frame.

When Installing the Door in Existing Skirting – Use the Following:

1. Disengage top front rail & remove two skirting panels by sliding upwards & out.
2. Replace skirting panels with frame of door, engaging existing skirting into J-molding & bottom of frame into ground track.
3. Use skirting removed in step 1 to fill void between top of door frame & top rail. (Usually the lengths required can be cut from one skirting panel, leaving the other for future use.)
4. Replace door into frame.

UV Protection and Painting

Although the plastic contains some UV protection, the level of protection may be increased by painting. Either latex or oil based paints (most brands of spray cans) are acceptable, with oil based paints being more durable.